


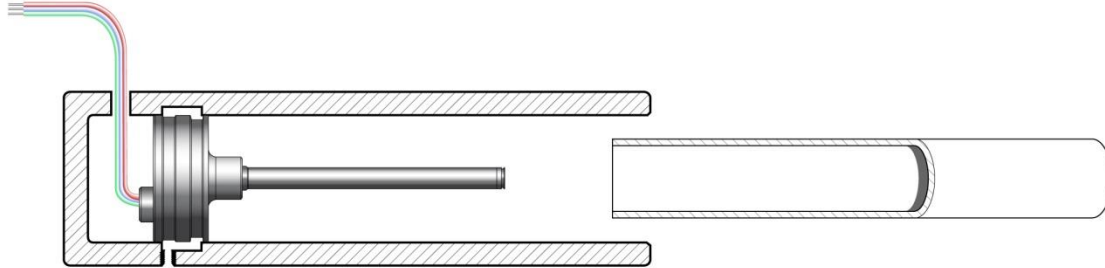

3. When the sensor is correctly positioned, remove cord, rubber tube and plastic tube. Secure sensor with screw as described in AI209399.



IMPORTANT INFORMATION

Whilst Curtiss-Wright Industrial LYLVL RQ Penny & Giles has designed this sensor to meet a range of applications it is the responsibility of the customer to ensure it meets their specific requirement.

Penny & Giles Controls Ltd makes no warranty or representation in respect of product fitness or suitability for any particular design application, environment, or otherwise, except as may subsequently be agreed in contract for the sale and purchase of products. Customers should therefore satisfy themselves of the actual performance requirements and subsequently the product's suitability for any particular design application and the environment in which the product is to be used.

Continual research and development may require change to products and specification without prior notification.

All trademarks acknowledged.